



1. Thickness control of abrasive carpets

The thickness of abrasive carpets should be measured. For this purpose, a laser through beam sensor type **L-LAS-TB-F-16x1-100/100-AL** is used. At this, the peak of the abrasive carpet is placed in the middle of the laser fork. The thickness can be properly measured as shown in the screen shots.

