



1. Distance measurement to insulation panels

The distance to insulation panels should be measured. For this purpose, a laser displacement sensor type **L-LAS-LT-80-SL-P** is used. Here, the distance from the sensor to the insulation panels is approximately 80mm. The distance to the surface of the insulation panels can be properly measured as shown in the screenshots.

