# **SPECTRO** Series


# SPECTRO-3-12-DIF-MSM-ANA-VIS

- Object distance (measuring range) 12 mm ± 1 mm
- Reduction of gloss effect due to diffuse illumination (volume lenses serve as a diffusor, for optimal scattering effect)
- L\*a\*b\*, L\*C\*h\*, L\*u\*v\* and xyY evaluation (CIE standard)
- Up to 3 colors can be taught
- 28x warm-white LED (diffuse) incl. interference filter and 14x blue-light LED (D65 similar LED light),
  - AC-, DC-operation or OFF for luminous objects can be switched)
- Color measurement (color, contrast, and gray scale detection)
- Insensitive to outside light (in AC-operation)
- Scan frequency max. 90 kHz (in DC- and OFF-operation)
- Switching frequency typ. 60 kHz
- 3 analog outputs to output color values to PLC
- 2 digital outputs to output taught colors
- TEACH via PC or external input
- Various evaluation algorithms can be activated
- "BEST HIT" mode ("human color assessment")
- Averaging can be activated (from 1 up to over 32000 values)
- Parameterizable via Windows® software, scope function
- RS232 interface (USB or Ethernet adapter is available)
- Temperature compensated
- 3-color filter detector (true color detector: "human color perception")





# Design

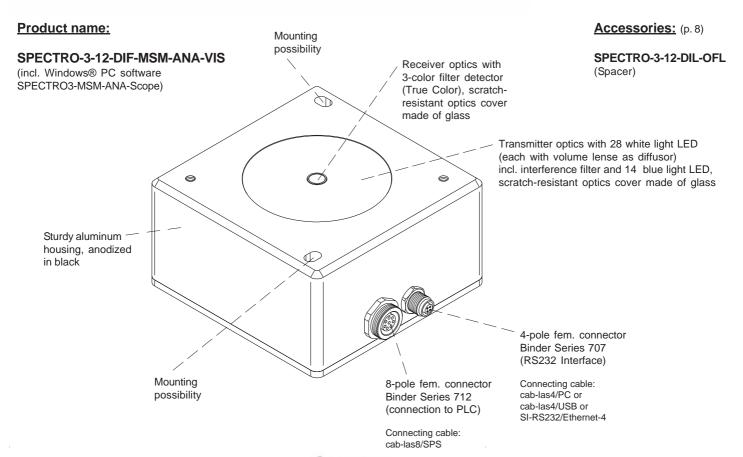






# **Technical Data**


Туре	SPECTRO-3-12-DIF-MSM-ANA-VIS
Voltage supply	+24VDC (± 10%), reverse polarity protected, overcurrent protected
Current consumption	< 1,2 A
Max. switching current	100 mA, short circuit proof
Input digital (1x)	IN0 (Pin 3), digital (0V/+24V)
Outputs digital (2x)	OUT0, OUT1 (Pin 4 and 5): digital (0V/+24V), npn-/pnp-able (bright-/dark-switching, can be switched)
Outputs analog (3x)	OUT2, OUT3, OUT4 (Pin 6, 7, and 8): voltage output 0 +10V (a*b*L*; u*v*L*, xyY; XYZ)
Interface	RS232 (an external USB and ETHERNET converter is available)
Pulse lengthening	0 100 ms, adjustable via PC software
Averaging	max. 32768 values, adjustable via PC software
Scan frequency	LED operation, can be switched via PC software: AC operation: max. 25 kHz (depends on parameterization) DC and OFF operation: max. 90 kHz (depends on parameterization)
Switching frequency	typ. 60 kHz
Analog band width	max. 90 kHz (-3dB)
Transmitter (light source)	28x warm-white LED, diffuse (diffusor = volume lens) incl. interference filter, 14x blue-light LED (provides spectral characteristics similar to D65)
Transmitter control	can be switched via PC software: AC operation (LED MODE-AC), DC operation (LED MODE-DC), OFF operation (LED MODE-OFF)
Object distance (measuring range)	typ. 12 mm ± 1 mm
Receiver	3-color filter detector (TRUE COLOR detector, "human color perception"), color filter curves acc. to CIE 1931
Receiver gain setting	8 steps (AMP1 AMP8), adjustable via PC software
Ambient light	max. 5000 Lux
Detection range (half intensity width)	typ. 5 mm at a distance of 12 mm
Reproducibility	in the X, Y color range each 1 digit at 12-bit A/D conversion
Temperature drift X,Y	$\Delta X/\Delta T$ ; $\Delta Y/\Delta T$ typ. 0,2 digits/°C (< 0,01% / °C)
Measurement accuracy	typ. $\Delta E = 0.3$
Resolution	$\Delta E = 0.01$
Color space	CIE L*a*b* , CIE L*C*h* , CIE L*u*v* and CIE xyY
Color memory capacity	non-volatile EEPROM with parameter sets for max. 3 colors (max. 31 colors in GROUP mode)
Housing dimensions	LxWxH approx. 80 mm x 80 mm x 42.5 mm (without flange connectors)
Housing material	aluminum, anodized in black
Enclosure rating	IP64
Connecting cables	to PLC: cab-las8/SPS or cab-las8/SPS-w to PC/RS232 interface: cab-las4/PC or cab-las4/PC-w to PC/USB interface: cab-las4/USB or cab-las4/USB-w to PC/Ethernet interface: SI-RS232/Ethernet-4
Type of connector	connection to PLC: 8-pole fem. connector (Binder 712), connection to PC: 4-pole fem. connector (Binder 707)
Operating temp. range	-20°C +55°C
Storage temperature range	-20°C +85°C
EMC test acc. to	DIN EN 60947-5-2 <b>( €</b>





# **Dimensions**

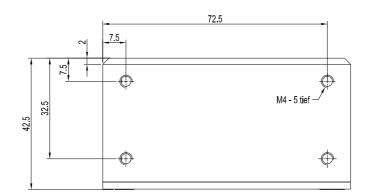

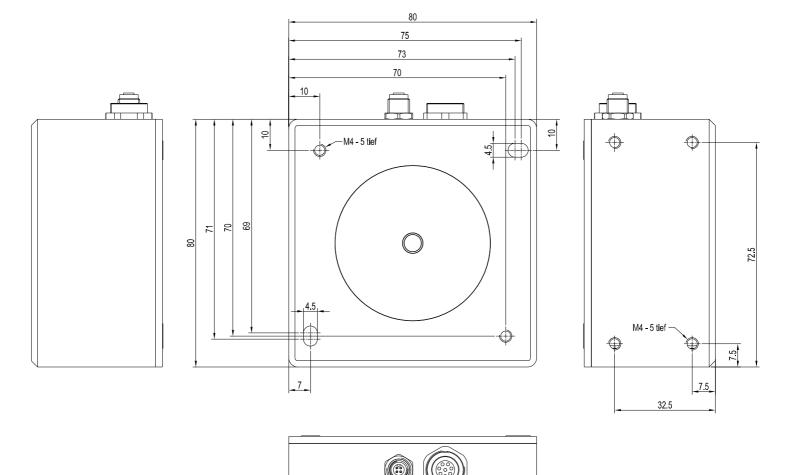







# **Connector Assignment**

#### Connection to PLC:

#### 8-pole fem. connector Binder Series 712

Pin: Color: Assignment:

1 white GND (0V)

2 brown +24VDC (±10%)

3 green IN0

4 yellow OUT0 (Digital 0: 0 ... 1V, Digital 1: +Ub - 10%)
5 grey OUT1 (Digital 0: 0 ... 1V, Digital 1: +Ub - 10%)

6 pink OUT2 (Analog: 0 ... +10V)
7 blue OUT3 (Analog: 0 ... +10V)
8 red OUT4 (Analog: 0 ... +10V)

Connecting cable: cab-las8/SPS-(length) cab-las8/SPS-w-(length) (angle type, 90°) (standard length 2m)



cab-las8/SPS-... (max. length 25m, outer jacket: PUR)



### Connection to PC:

#### 4-pole fem. connector Binder Series 707

Pin: Assignment:

- 1 +24VDC (+Ub, OUT)
- 2 GND (0V)
- 3 RxD
- 4 TxD

### Connection via RS232 interface at the PC:

Connecting cable: cab-las4/PC-(length) cab-las4/PC-w-(length) (angle type 90°) (standard length 2m)

#### alternative:


#### Connection via USB interface at the PC:


Connecting cable (incl. driver software): cab-las4/USB-(length) cab-las4/USB-w-(length) (angle type 90°) (standard length 2m)

 
#### <u>alternative:</u>

Connection to local network via Ethernet bus:

Adapter (based on *Lantronix XPortModul*): SI-RS232/Ethernet-4-(length) (standard length 2m)

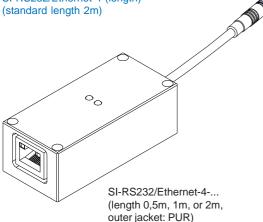

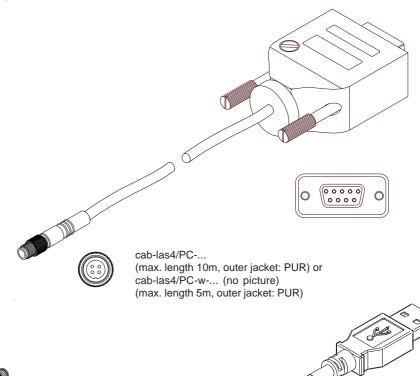



cab-las4/USB-... or cab-las4/USB-w-... (no picture) (each max. length 5m, outer jacket: PUR)







# **Measuring Principle**

#### Measuring principle of color sensors of SPECTRO-3-...-MSM-ANA Series:

The SPECTRO-3-...-MSM-ANA provides highly flexible signal acquisition. For example, the sensor can be operated in alternating-light mode (AC mode), which makes the sensor insensitive to extraneous light. It also can be set to constant-light mode (DC mode), which makes the sensor extremely fast. With the stepless adjustment of the integrated light source as well as the selectable gain of the receiver signal and an INTEGRAL function the sensor can be set to almost any surface or any "self-luminous object".

When the integrated light source of the SPECTRO-3-...-MSM-ANA color sensor is activated, the sensor detects the radiation that is diffusely reflected from the object. As a light source the SPECTRO-3-...-MSM-ANA color sensor uses warm-white LEDs as well as blue LEDs (in case of color sensor type -VISUV additional UV LEDs) with adjustable transmitter power. An integrated 3-fold receiver for the red, green, and blue content of the light that is reflected from the object, or the light that is emitted by a "self-luminous object", is used as a receiver.

The SPECTRO-3-...-MSM-ANA color sensor can be "taught" up to 3 colors. For each of these taught colors it is possible to set tolerances. Depending on the settings the taught colors represent a color cylinder or a color sphere in space. Evaluation of the taught colors is performed either with the "FIRST HIT" or with the "BEST HIT" mode. With "FIRST HIT" the first hit in the teach table is output, and with "BEST HIT" the best hit in the teach table is output. Raw data are represented with 12 bit resolution.

Color detection either operates continuously or is started through an external PLC trigger signal. The respective detected color either is provided as a binary code at the 2 digital outputs or can be sent directly to the outputs, if only up to 2 colors are to be detected.

In addition to the 2 digital outputs there also are 3 analog outputs that either provide the red, green, and blue components or the calculated color coordinates in values of 0-10V.

Through input IN0 (green wire of the cab-las8/SPS cable) the color sensor can be taught up to 3 colors. For this purpose the corresponding parameter mode must be set with the software.

Parameters and measurement values can be exchanged between a PC and the SPECTRO-3-...-MSM-ANA color sensor through the serial RS232 interface. All the parameters for color detection also can be saved to the non-volatile EEPROM of the SPECTRO-3-...-MSM-ANA color sensor through this serial RS232 interface. When parameterisation is finished, the color sensor continues to operate with the current parameters in STAND-ALONE mode without a PC.

The sensors of the SPECTRO-3-...-MSM-ANA series can be calibrated. Calibration can be performed to any surface with known color coordinates. A ColorCheckerTM table is available as an alternative. This table has 24 color fields according to the CIE STANDARD that can be used for calibration.








#### **Parameterization**

#### Windows® user interface:

The color sensor is parameterized under Windows® with the SPECTRO3-MSM-ANA-Scope software. The Windows® user interface facilitates the teach-in process at the color sensor and supports the operator in the task of adjustment and commissioning of the color sensor.

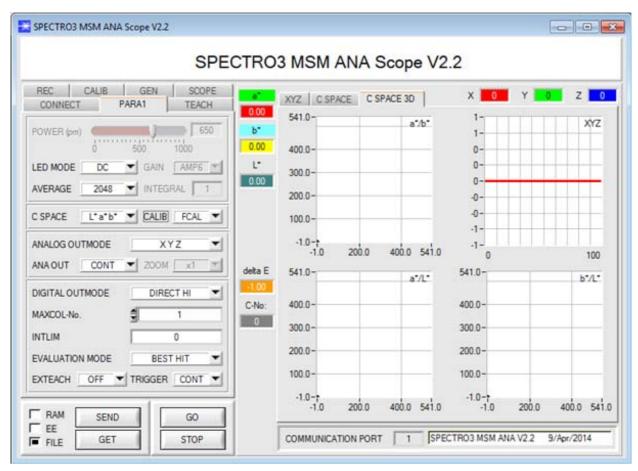

The RS232 interface (tab PARA1) is used for setting parameters such as e.g.:

- POWER: Light power of the LED

- LED MODE: Triggering of the internal light source (AC, DC)

GAIN: Used for setting the gain of the receiver (AMP1 ... AMP8)

- AVERAGE: Averaging over a maximum of 32768 values. This function field is used for adjusting the number of

scanning values (measurement values) over which the raw signal measured at the receiver is averaged. A higher AVERAGE default value reduces noise of the raw signals at the receiver unit and

there will be a decrease of the maximal available switching frequency of the sensor

- INTEGRAL: This function field is used to set the number of scan values (measurement values) over which the

raw signal measured at the receiver is summed up. This integral function allows the reliable

detection even of extremely weak signals

- C SPACE: Selection of a color space (xyY, L\*a\*b\*, L\*u\*v\*) for the calculation of the color stimulus specification.

- ANA LOG OUTMODE: Function to determine the signals that the sensor provides at its analog outputs (OUT2, OUT3, OUT4)

(OFF, XYZ, COLOR SPACE, CS REF)

EVALUATION MODE: BEST HIT or FIRST HIT

- TRIGGER: Continuous or external or self trigger. (CONT, EXT1, EXT2, TRANS)

EXTEACH: In all the evaluation modes teaching of a color can be performed externally through INO.

- INTLIM: Minimum intensity required for color evaluation

- MAXCOL-No.: Number of colors to be checked

- DIGITAL OUTMODE: Control of the two digital outputs (OUT0, OUT1)

Tab TEACH Opens a window where you can teach colors to the TEACH TABLE

Tab CALIB Selection of calibration mode (FCAL = factory calibration or UCAL = user calibration).

Tab SCOPE Visualises an oscilloscope

Tab GEN Displays the current temperature value TEMP in the sensor housing


Tab REC Data recorder





# **Firmware Update**

### Firmware update by means of the software "FirmwareLoader":

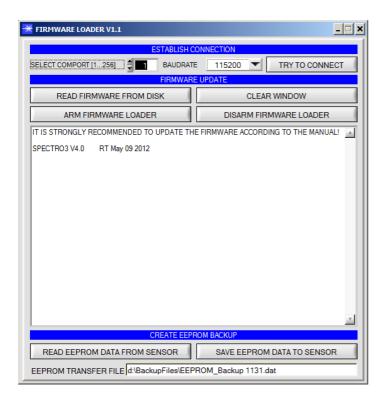

The software "Firmware Loader" allows the user to perform an automatic firmware update. The update will be carried out through the RS232 interface.

An initialisation file (xxx.ini) and a firmware file (xxx.elf.S) are required for performing a firmware update. These files can be obtained from your supplier. In some cases an additional firmware file for the program memory (xxx.elf.p.S) is also needed, and this file will be automatically provided together with the other two files








**Spacer** 
 
# SPECTRO-3-12-DIF-OFL Spacer


Spacer (offline unit) for color sensor SPECTRO-3-12-DIF-MSM-ANA-VIS

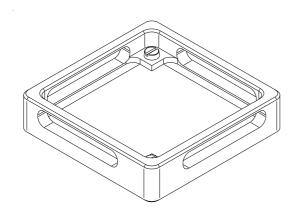


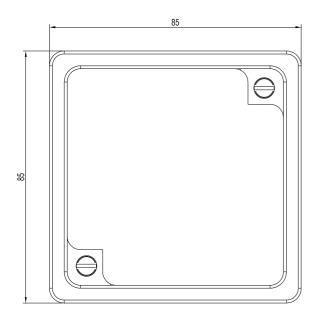





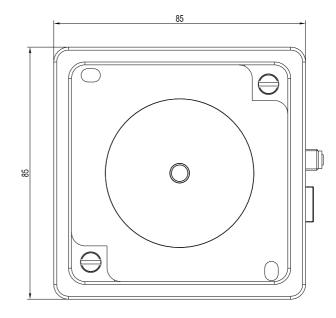

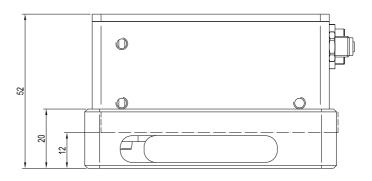

All dimensions in mm

